

installation instructions

race airflow system for 2005/2007 bmw k1200s

part number 76010

©2006, 2005 by evoluzione.net, inc.

this **evoluzione cyclesports race airflow system** has been designed to add horse power and torque by removing the restrictive factory air tubes and replacing them with cleanable high flow air filters.

introduction

this **evoluzione cyclesports race airflow system** is easy to install by carefully following the instructions. read all instructions first to familiarize yourself with the parts and procedures.

installation

step 1. using a torx t-25 tool, remove the two screws holding the battery cover. remove the battery cover (please see photo one).

step 2. remove the seven screws holding the left side panel. *note the different lengths of screws.* remove the side panel by gently pulling out the panel.

step 3. remove the three screws holding the left tank cover. *note the different lengths of screws.* dis-

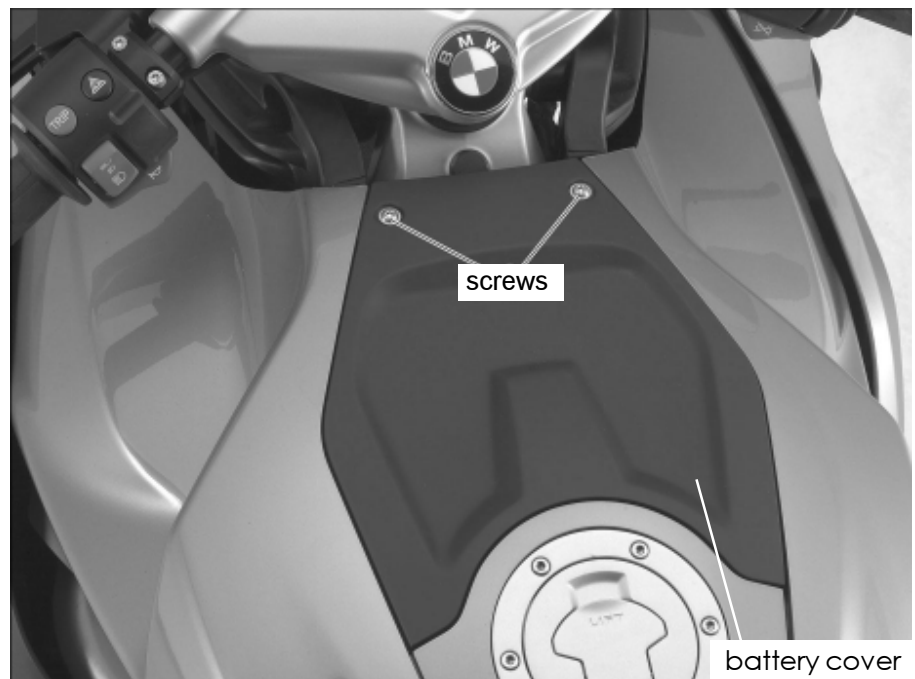


photo one

engage the guide pins and remove the tank cover.

step 4. remove the two retaining clips holding the left intake air pipe. remove the intake air pipe from the holder at the intake air silencer and from the rubber grommet

(please see photo two).

step 5. install one of the supplied air filters into the left side air box ring. install the ring with filter into the holder at the intake air silencer and insert the two retaining clips to hold them in place (see photo

three).

note: the intake air pipe is not reused.

step 6. install the left tank cover by engaging the guide pins and reinstalling the three screws.

step 7. install the front left side panel and reinstall the seven screws.

step 8. remove the seven screws holding the right side panel. note the different lengths of screws. remove the side panel by gently pulling out the panel.

step 9. remove the three screws holding the right tank cover. note the different lengths of screws. disengage the guide pins and remove the tank cover.

step 10. remove the two retaining clips holding the right intake air pipe. remove the intake air pipe from the holder at the intake air silencer and from the rubber grommet.

step 11. install the supplied air filter into the right side air box ring. install the ring with filter into the holder at the intake air silencer and insert the two retaining clips to hold it in place (see photo three). note: the intake air pipe is not reused.

step 12. install the right tank cover by engaging the guide pins and reinstalling the three screws.

step 13. install the front right side panel and reinstall the seven screws.

step 14. reinstall the battery cover and the two screws

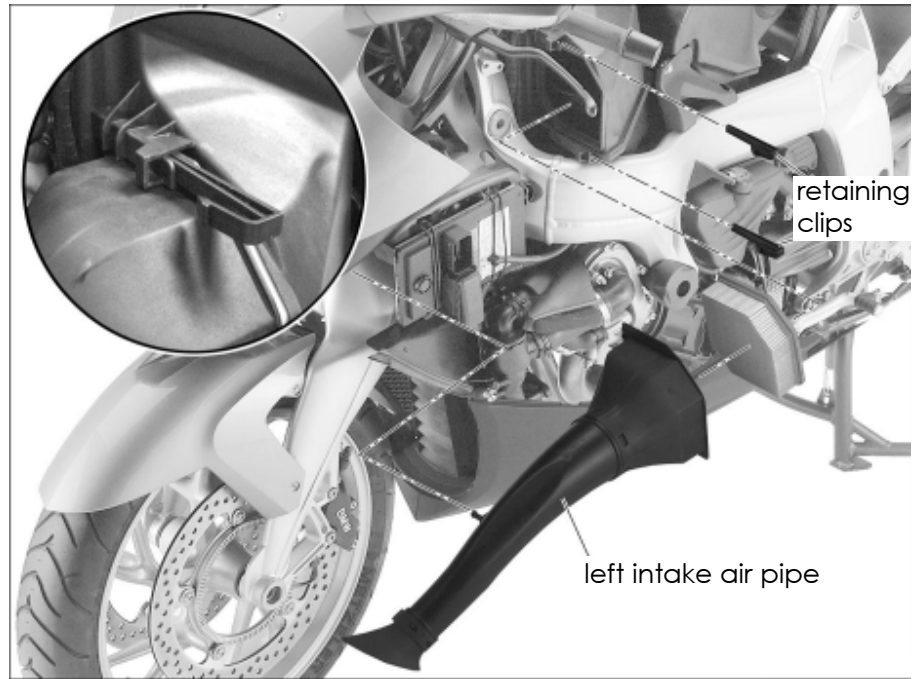


photo two

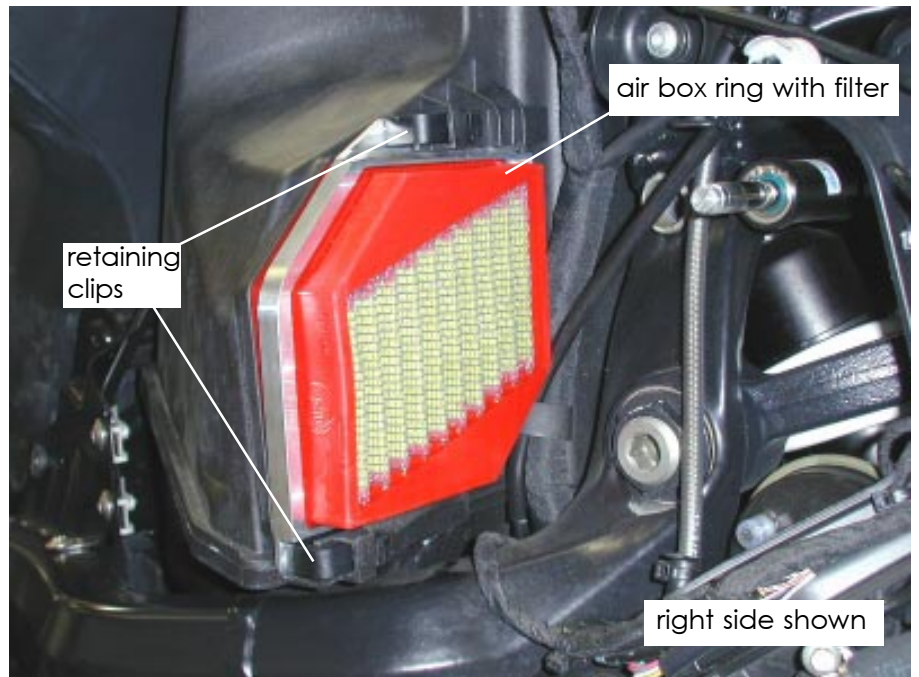


photo three

parts list

billet air box ring (2)
high flow air filter (2)

tools required

torx t25